

Tech Note:


Genconnex® EU7000is

External fuel solenoid installation instructions

This technical note describes how to add a low pressure gas solenoid on the Genconnex® propane & natural gas modified Honda EU7000is.

Tools needed:
#10mm socket wrench


Est. time for install:
10 min.

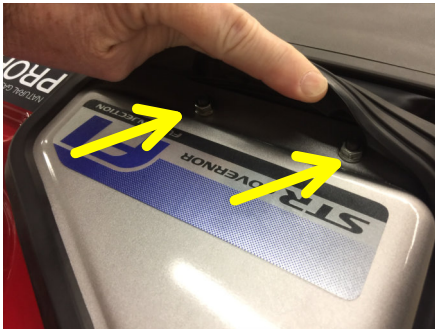


Pic 1



Pic 2

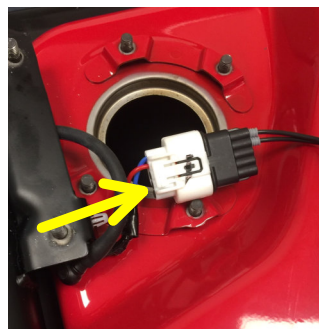

Pic 3

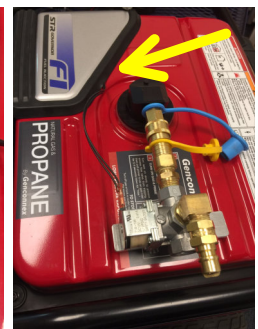

Pic 4

Step 1: Remove two #10mm nuts under gasket then remove #10mm bolt on side above door.

Step 2: Connect quick disconnect of solenoid to top inlet disconnect.

Step 3: Connect wire harness from solenoid to fuel pump connector.

Step 4: Replace silver triangle cover and bolt back in place as shown.

Step 5: Connect fuel line to new male quick disconnect on solenoid module.